



# Huawei P9 Lite Headphone Jack Replacement

Replace the headphone jack in your Huawei P9 Lite.

Written By: Dominik Schnabelrauch



## INTRODUCTION

Use this guide to replace the headphone jack in your Huawei P9 Lite.


---



### TOOLS:


- [iFixit Opening Picks set of 6](#) (1)
  - [Plastic Cards](#) (1)
  - [Spudger](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Back Cover

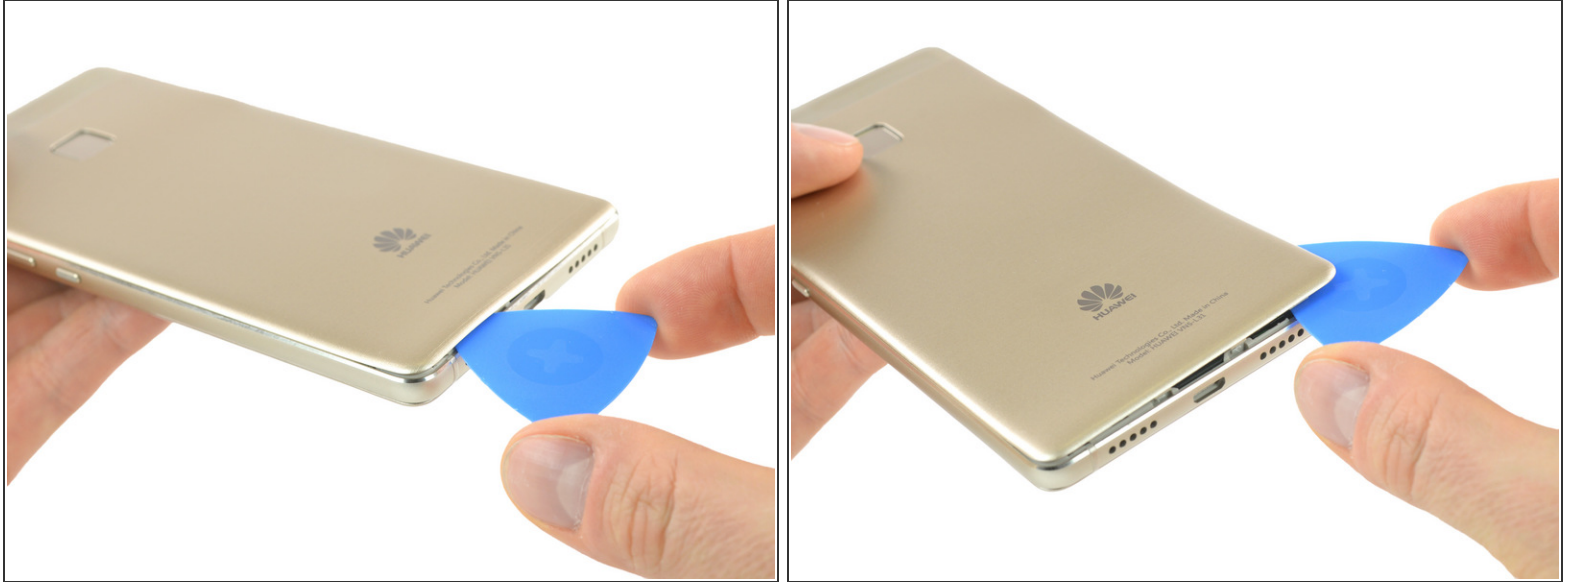


- Start on the bottom left corner of the back cover with an opening pick.
- Work your way around counterclockwise and carefully pry the plastic tabs open one by one.

## Step 2

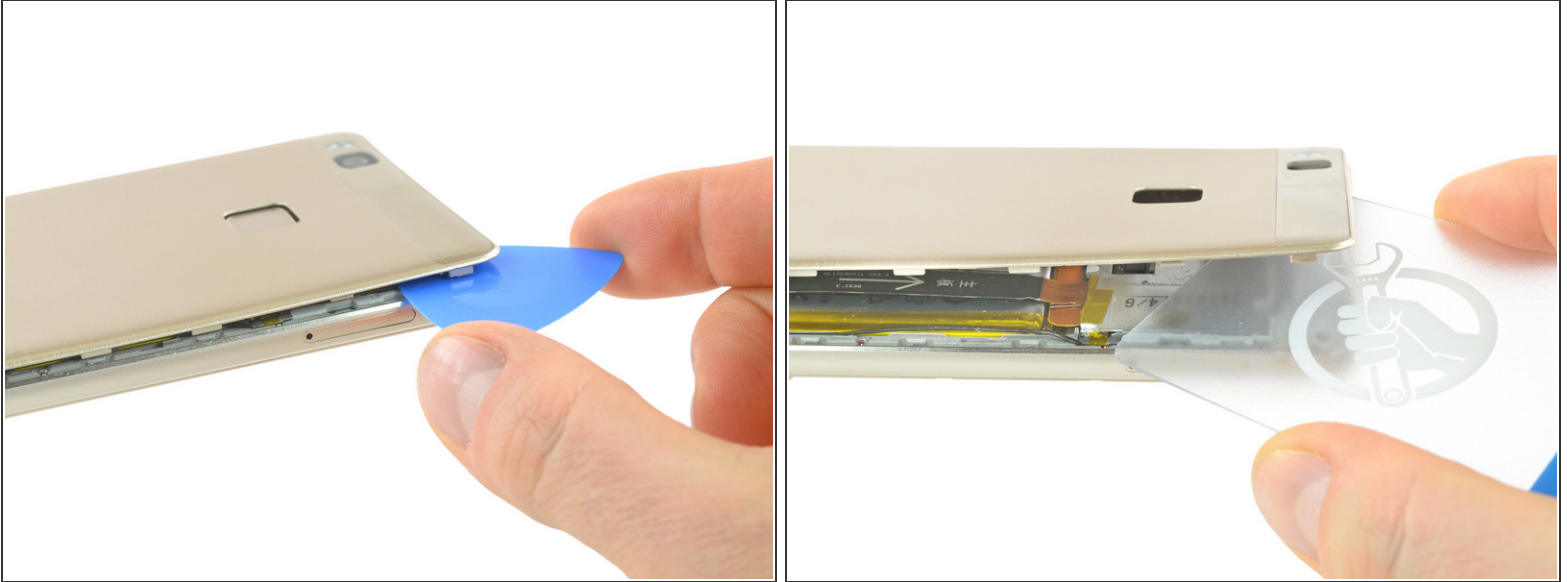



- When reaching the top right corner of the phone switch to a plastic card.
  - ❗ There is adhesive underneath the back cover that holds it to the battery and the metal plate at the top.
  - ⚠ Be careful with the flex cable at the right hand side.
- Use the plastic card to lever the back cover away and loosen it from the adhesive.

### Step 3

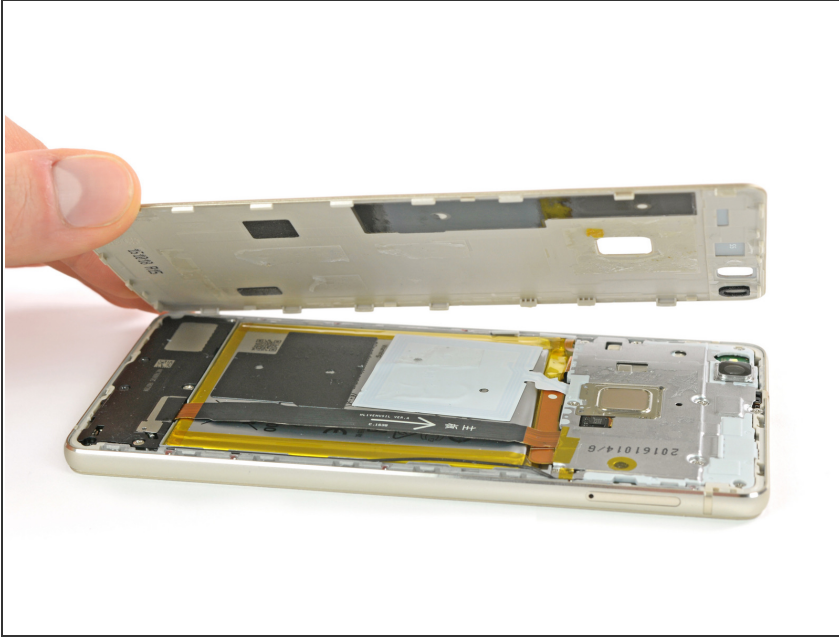

- When the back cover is freed from the adhesive you can pop it off by hand completely.


### Step 4 — Fingerprint Sensor

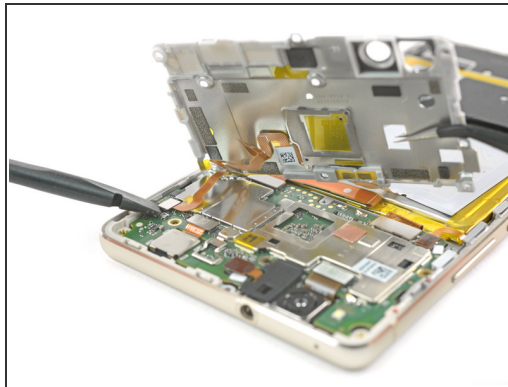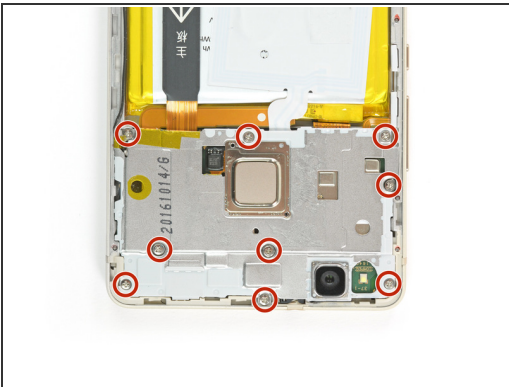

- Loosen the 9 Phillips #00 screws that hold the metal plate with the sensor.
  - ⓘ If there are any water indicators on top of the screws, take them off and set them aside.
- Unplug the fingerprint sensor connector from the motherboard.
  - ⚠ Don't take away the plate, yet. The NFC antenna is still glued to it.
- Peel off the the flex cable of the NFC antenna that is adhered to the metal plate.



## Step 5 — Headphone Jack

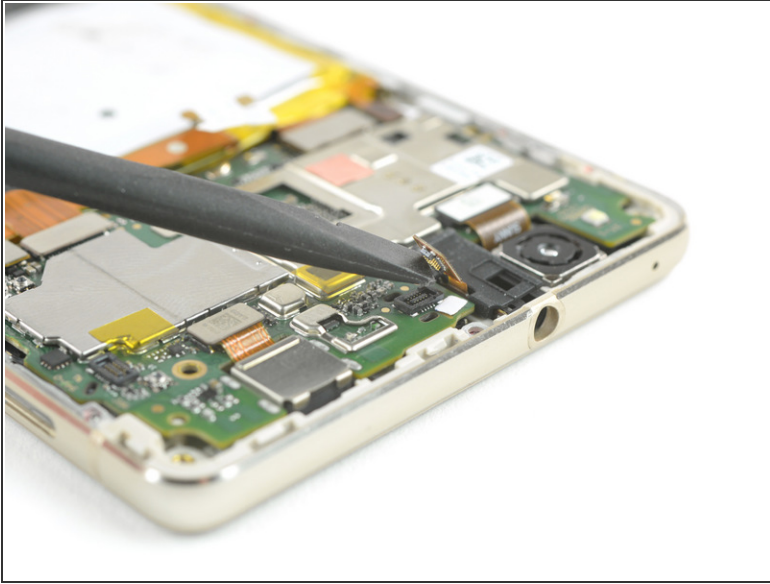

- Disconnect the headphone jack with a spudger.
- Take the headphone jack out of its recess.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 11:18:13 PM.